

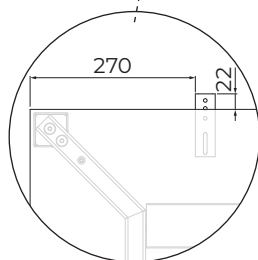



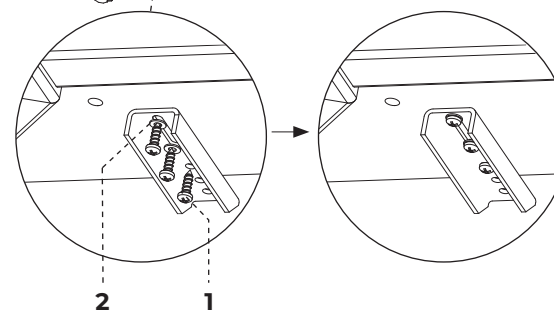
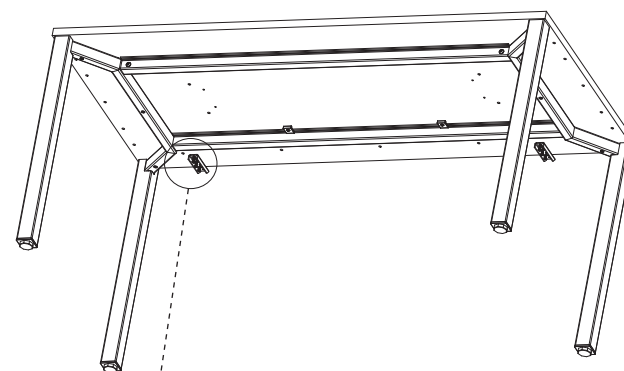
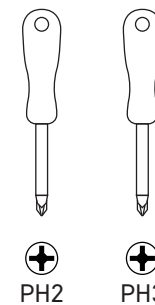


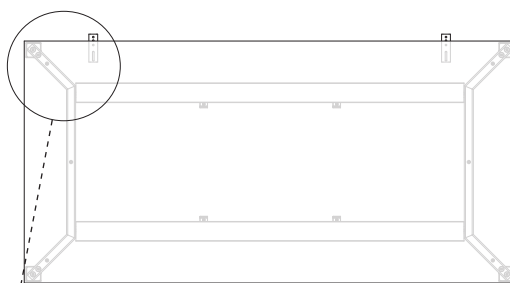


Paravány ALFA600 Montážní návod – držáky bez trnu

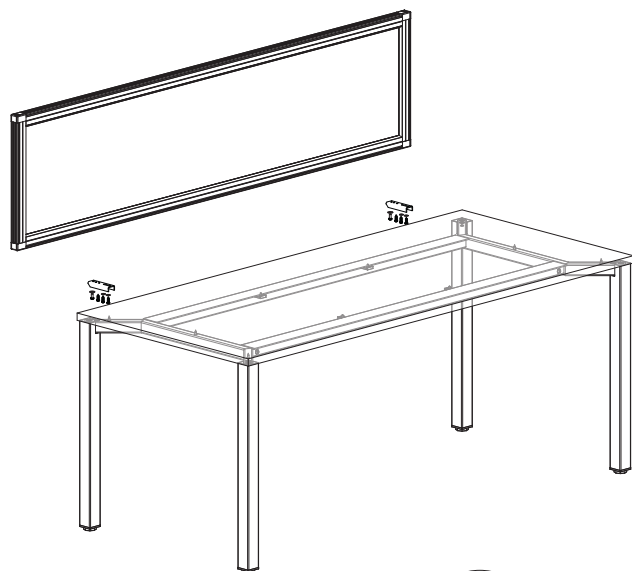


1	2	3
		
4.8x16	200126999 6.4	M6x16
6x	6x	2x





Paravány ALFA600 Montážní návod – držáky bez trnu

1	2	3
		
4.8x16	200126999 6.4	M6x16
6x	6x	2x

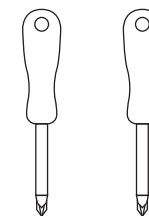





PH2

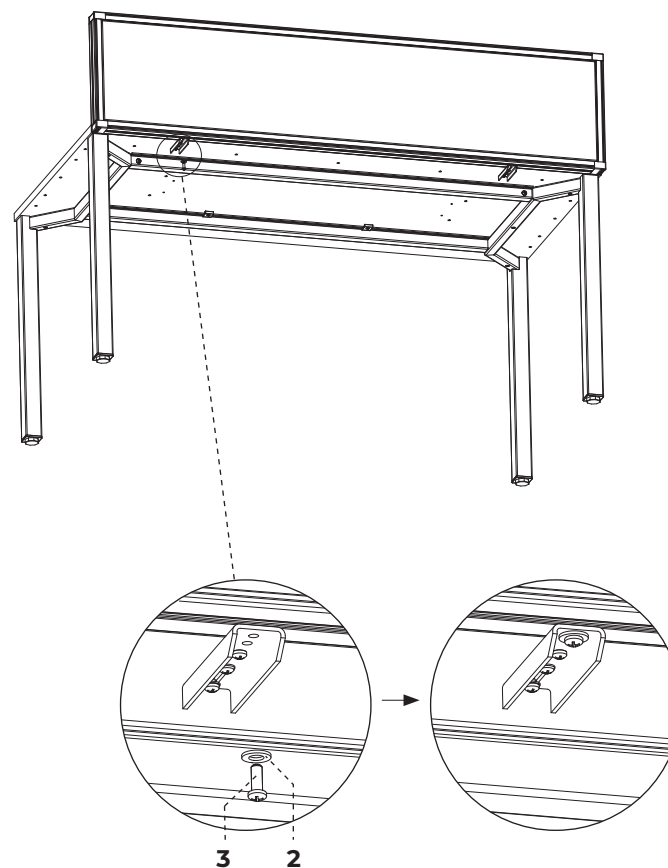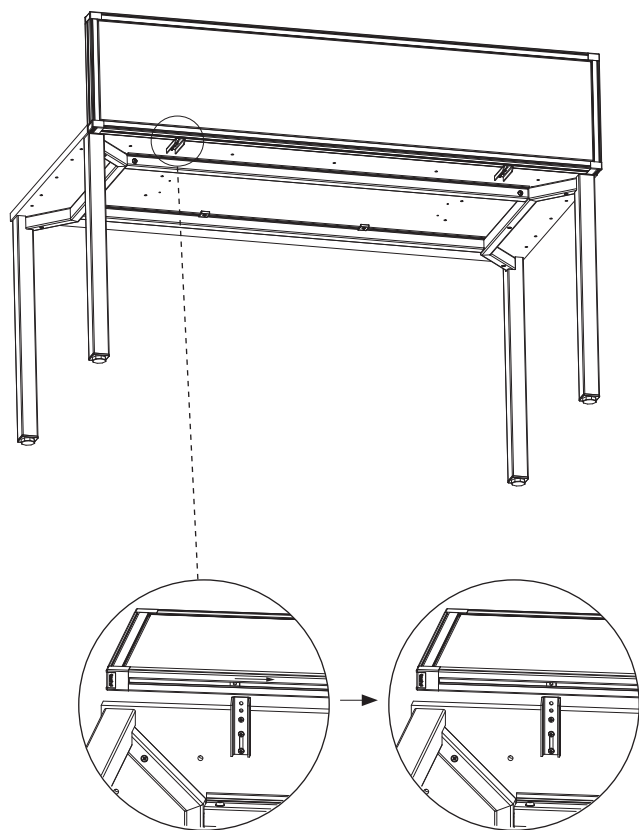
PH3

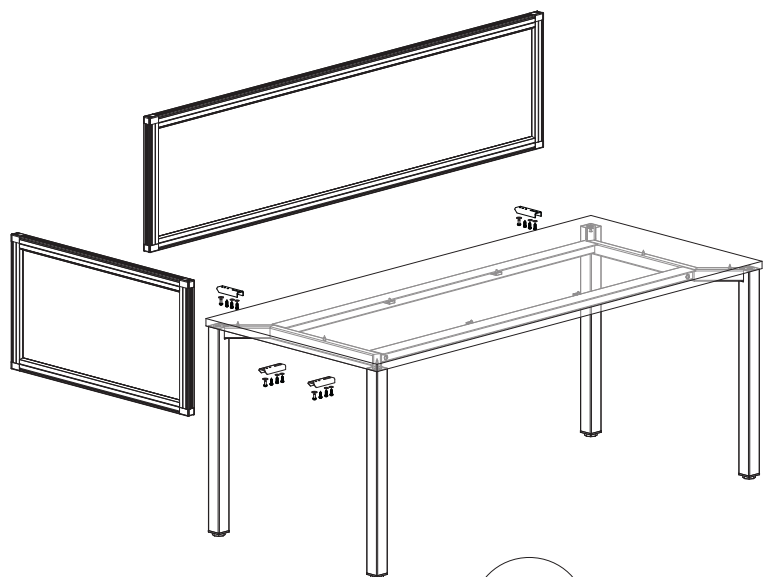



Paravány ALFA600 Montážní návod – držáky bez trnu




1	2	3
		
4.8x16	200126999 6.4	M6x16
24x	24x	8x

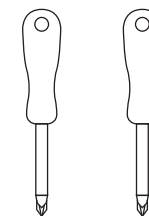

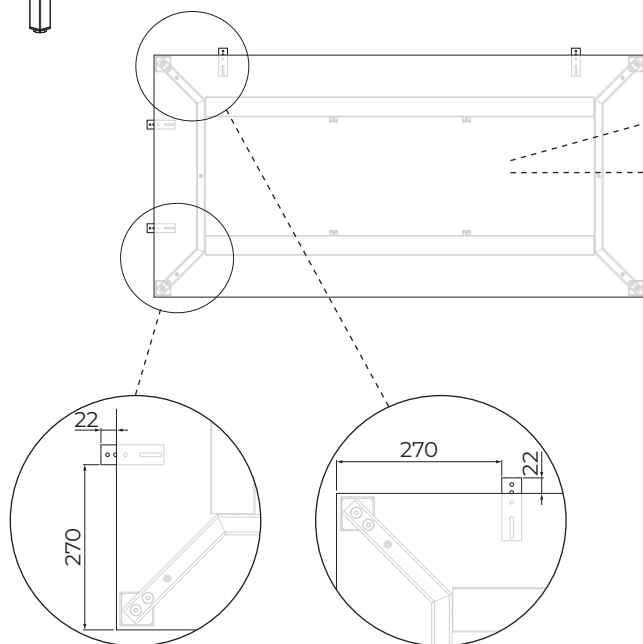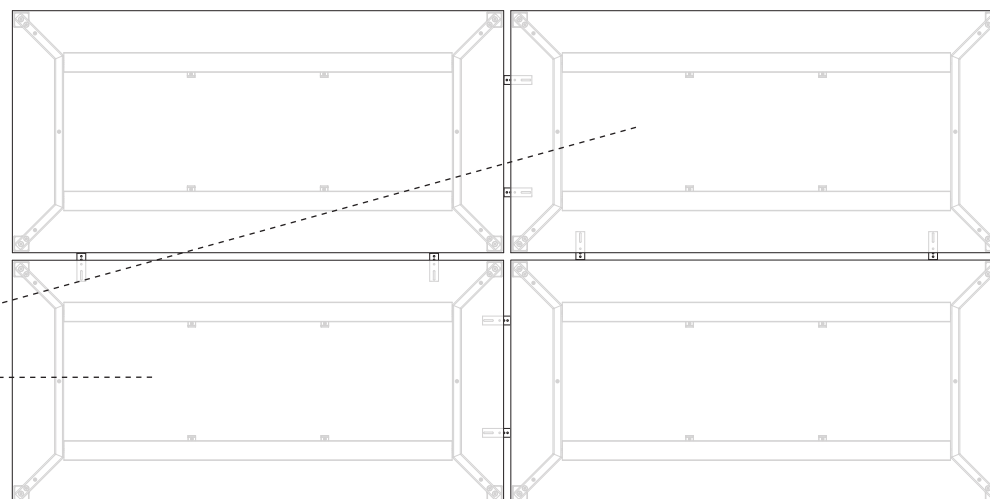



PH2 PH3

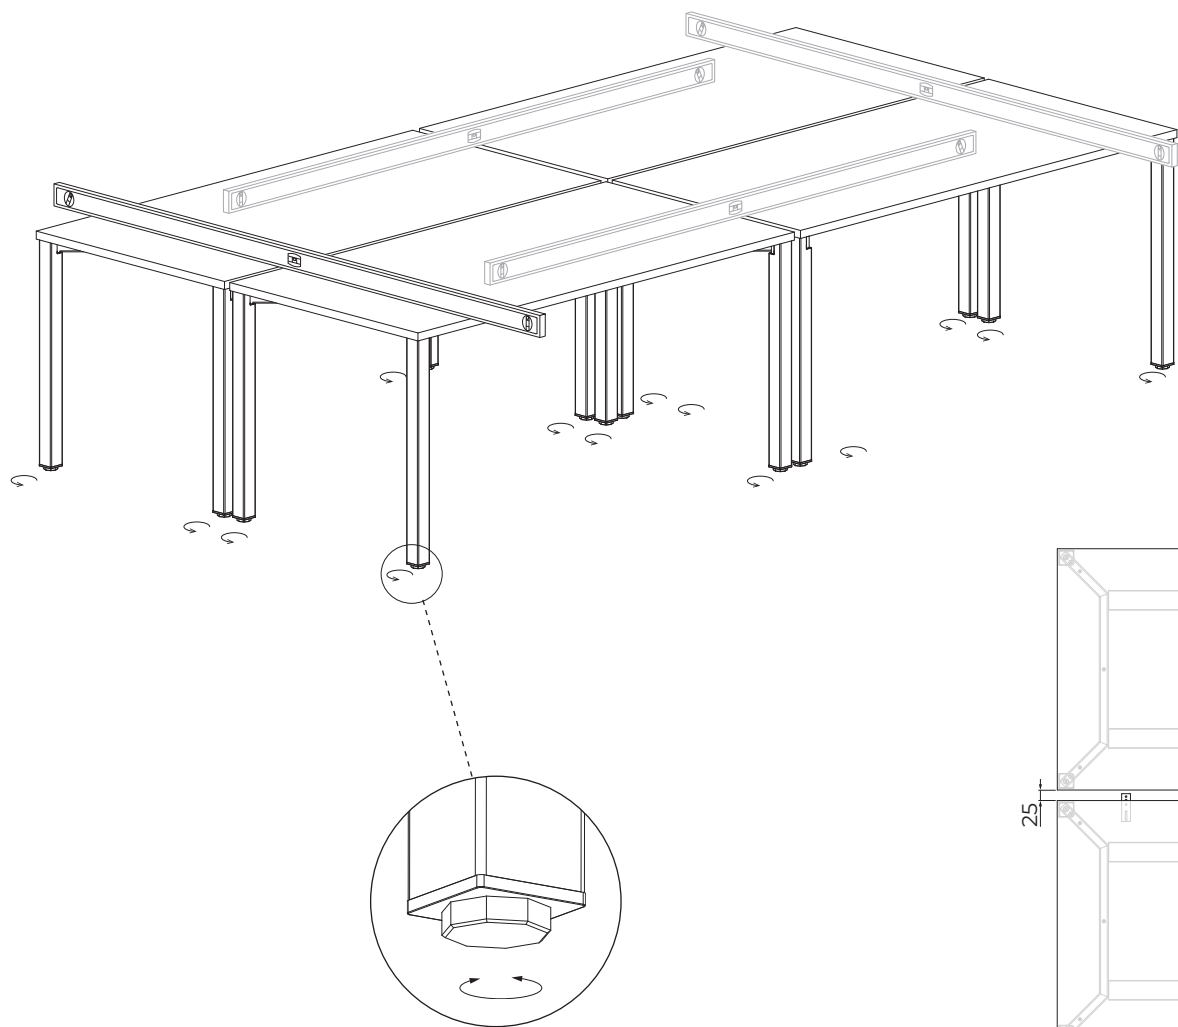

Paravány ALFA600 Montážní návod – držáky bez trnu




1	2	3
		
4.8x16	200126999 6.4	M6x16
24x	24x	8x

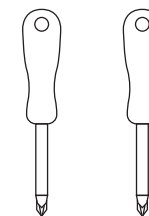





PH2

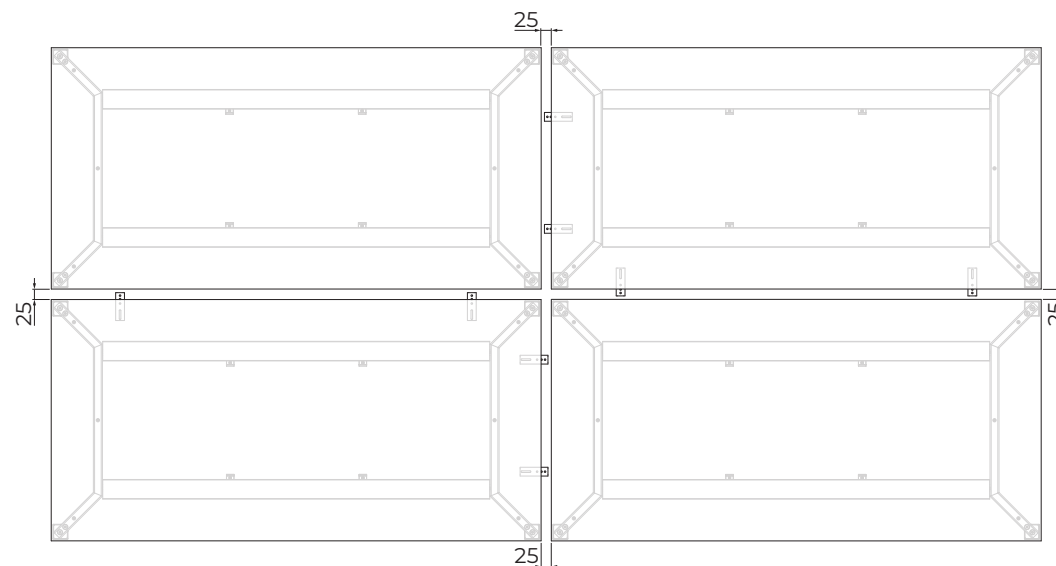
PH3

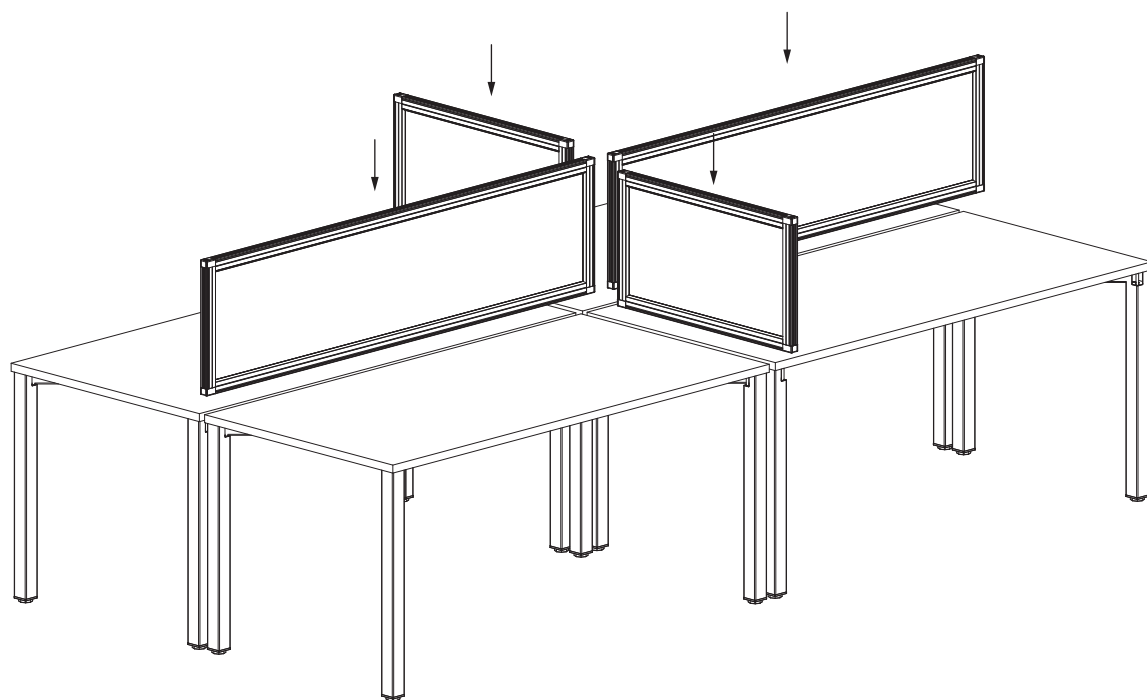

Paravány ALFA600 Montážní návod – držáky bez trnu




1	2	3
		
4.8x16	200126999 6.4	M6x16
24x	24x	8x

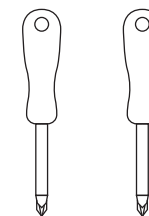





PH2

PH3

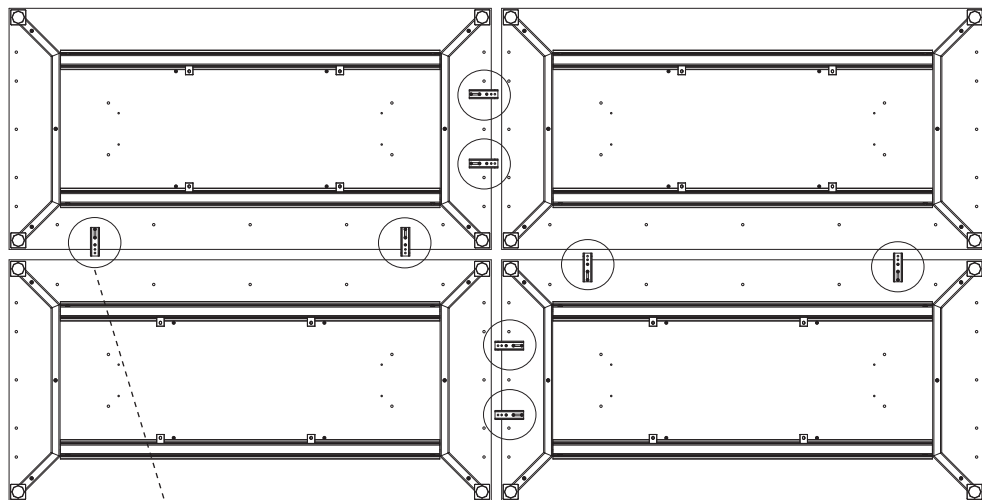Paravány ALFA600 Montážní návod – držáky bez trnu




1	2	3
		
4.8x16	200126999 6.4	M6x16
24x	24x	8x


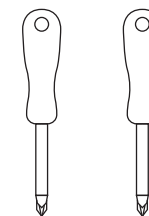





PH2

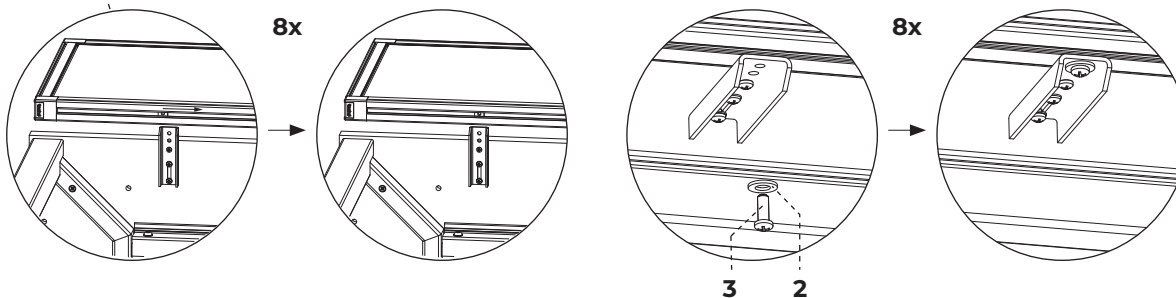
PH3

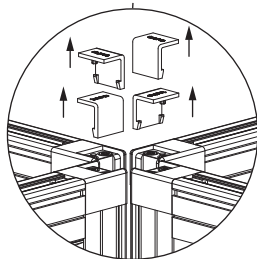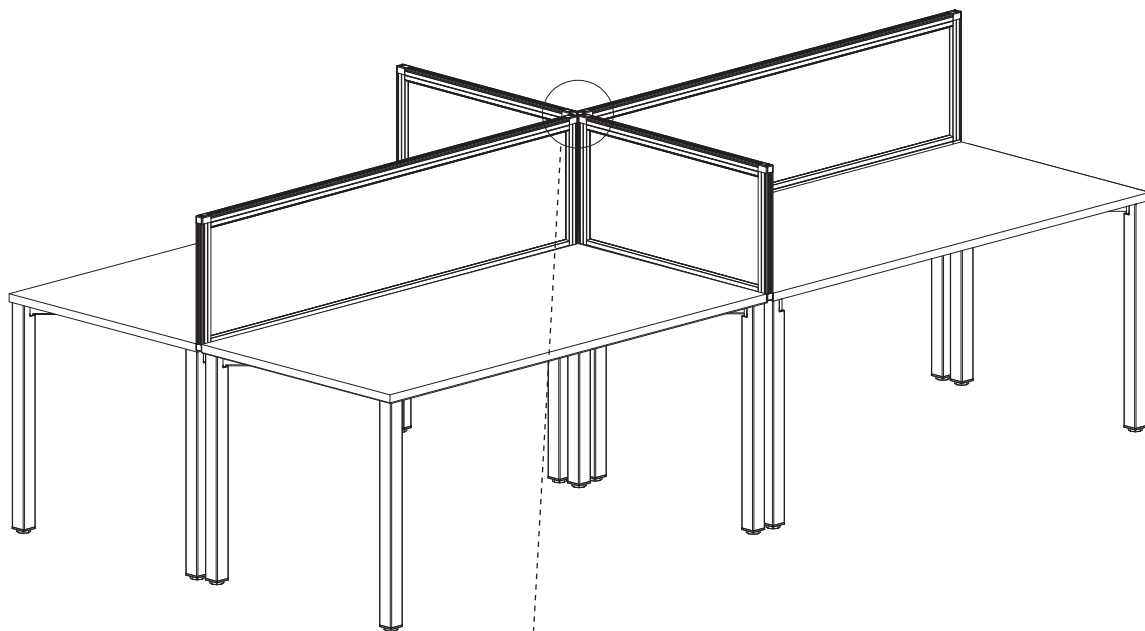

Paravány ALFA600 Montážní návod – držáky bez trnu





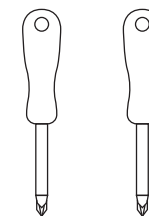
1	2	3
		
4.8x16	200126999 6.4	M6x16
24x	24x	8x




PH2

PH3


Paravány ALFA600 Montážní návod – držáky bez trnu

1	2	3
		
4.8x16	200126999 6.4	M6x16
24x	24x	8x

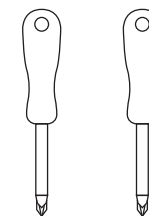





PH2

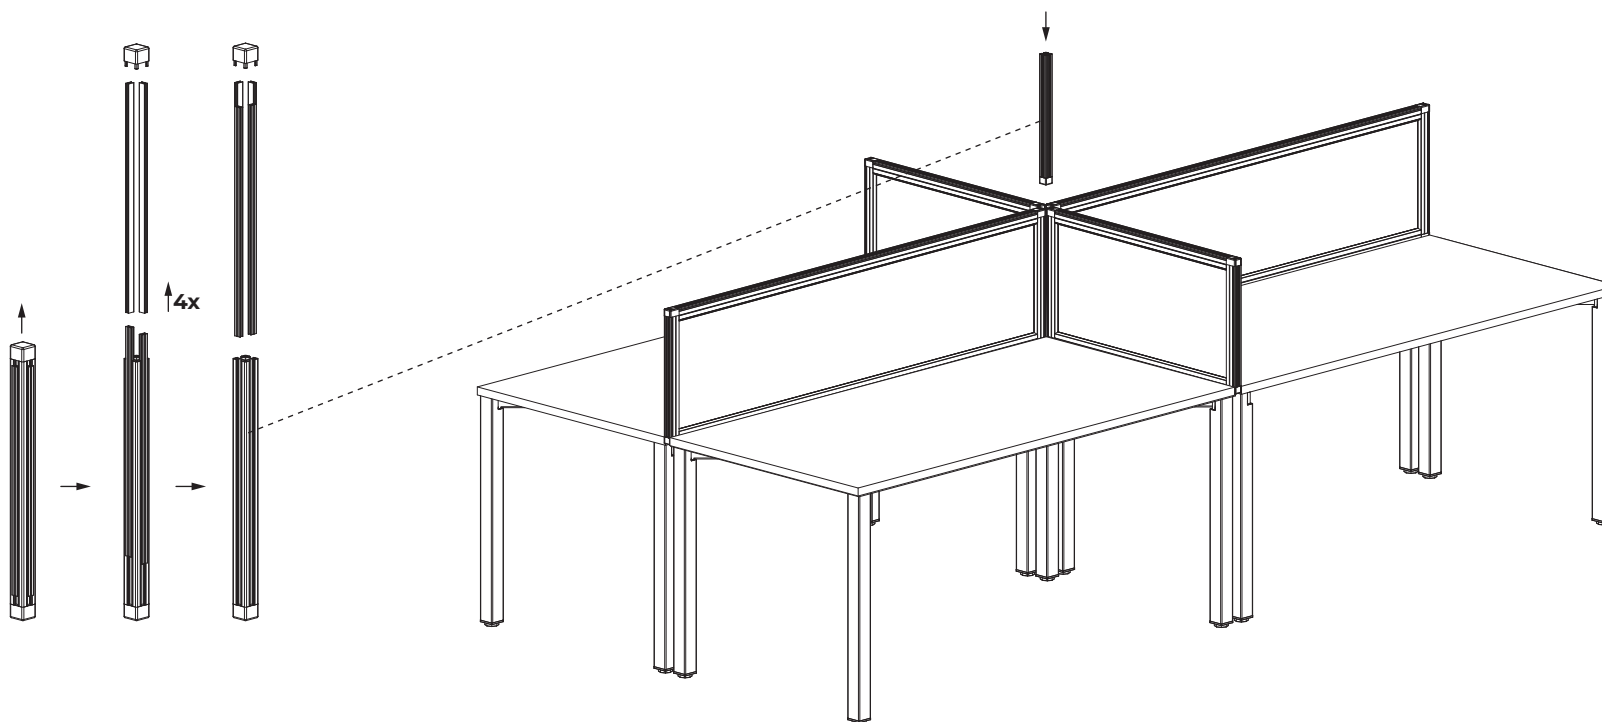
PH3

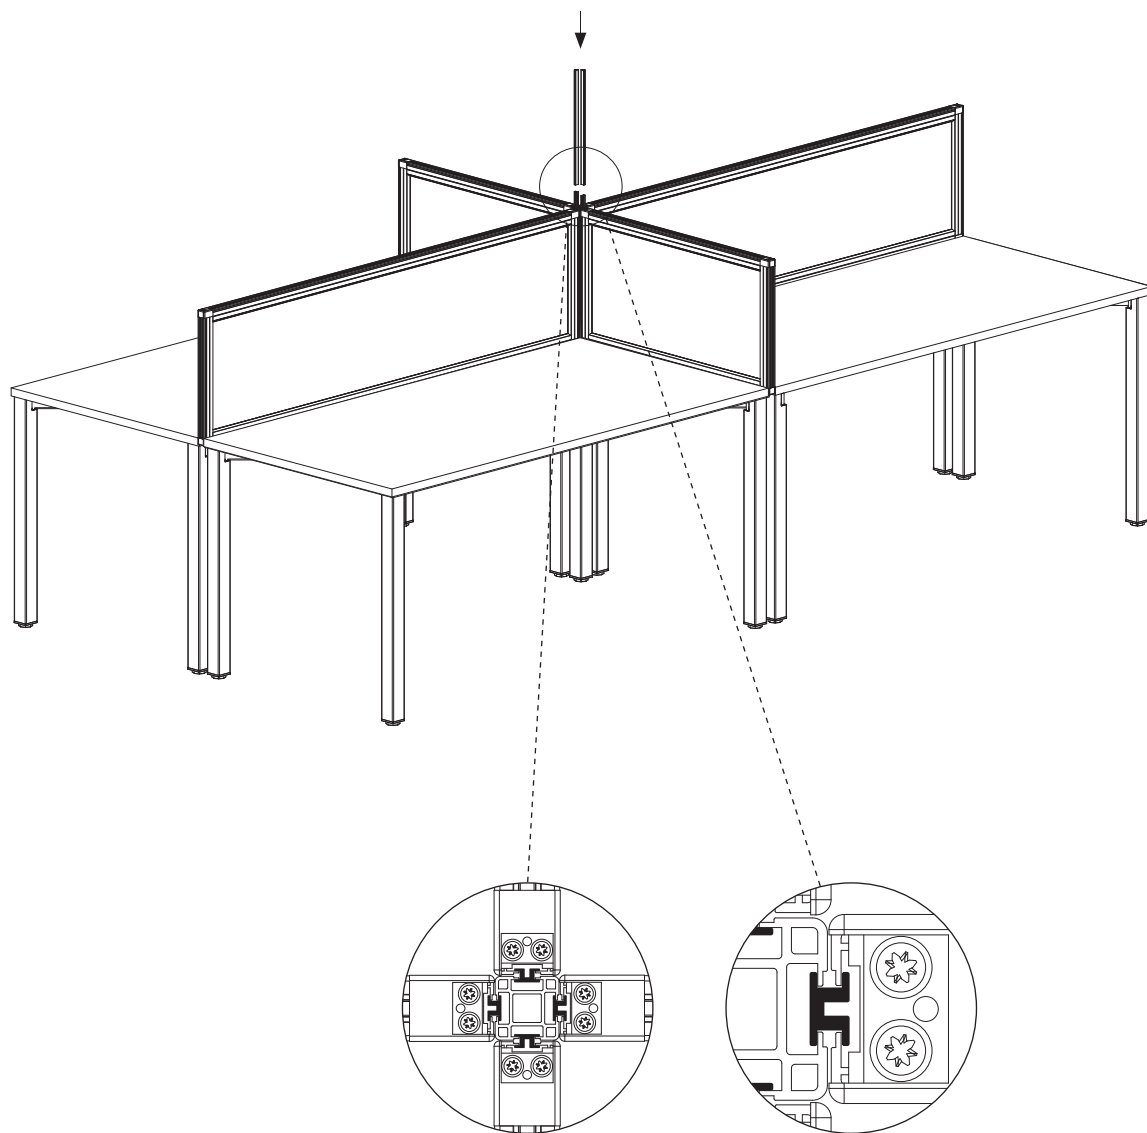

Paravány ALFA600 Montážní návod – držáky bez trnu





1	2	3
		
4.8x16	200126999 6.4	M6x16
24x	24x	8x

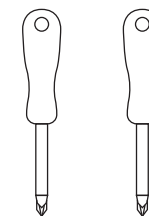





PH2

PH3

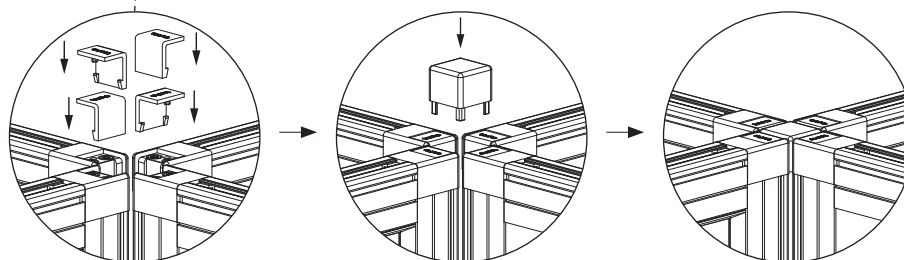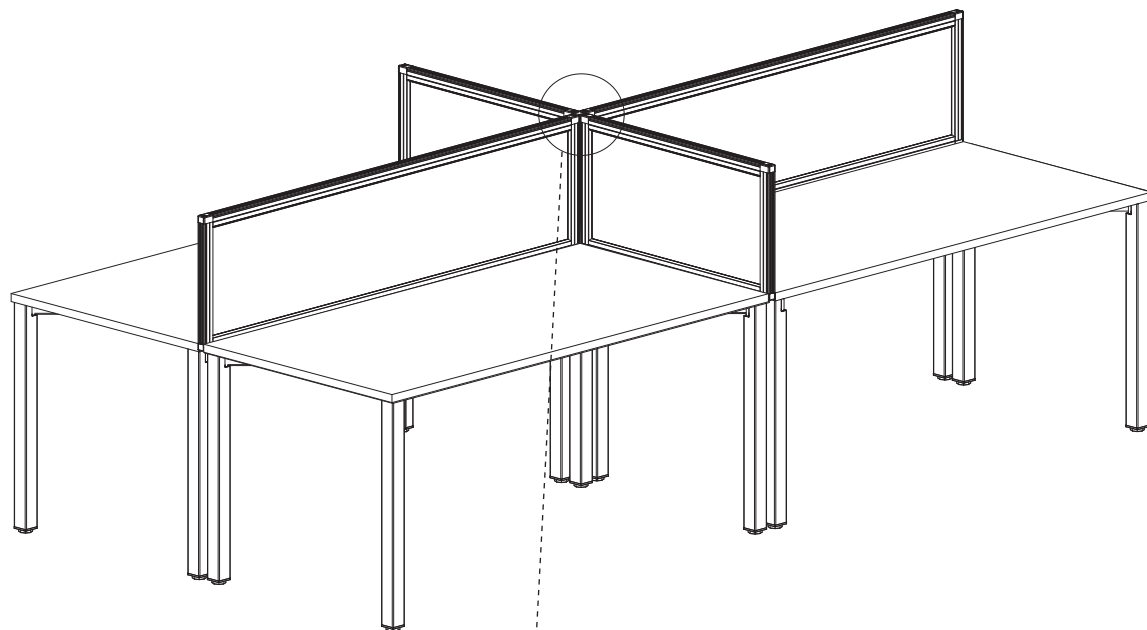Paravány ALFA600 Montážní návod – držáky bez trnu



1	2	3
		
4.8x16	200126999 6.4	M6x16
24x	24x	8x

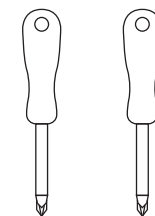

PH2

PH3